


SKU: E-TABLE-2S-HOME-OFFICE


Installation guide

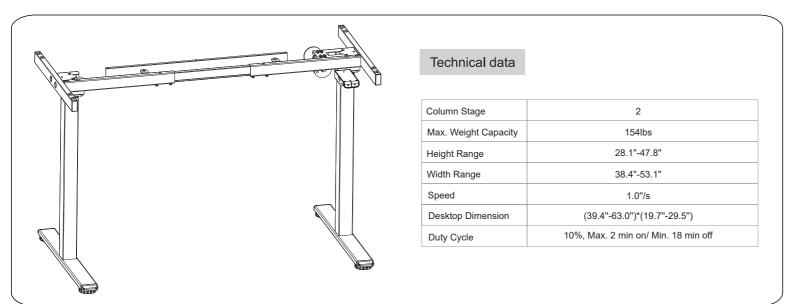



Accessory list


Attention: The drawings below are for guidance only and they may differ from the product and fittings received. Please contact the customer service department if there are any missing tools or installation problems.




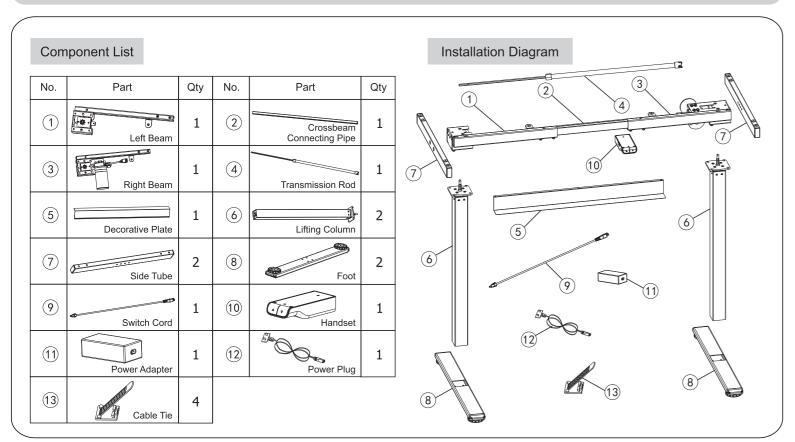


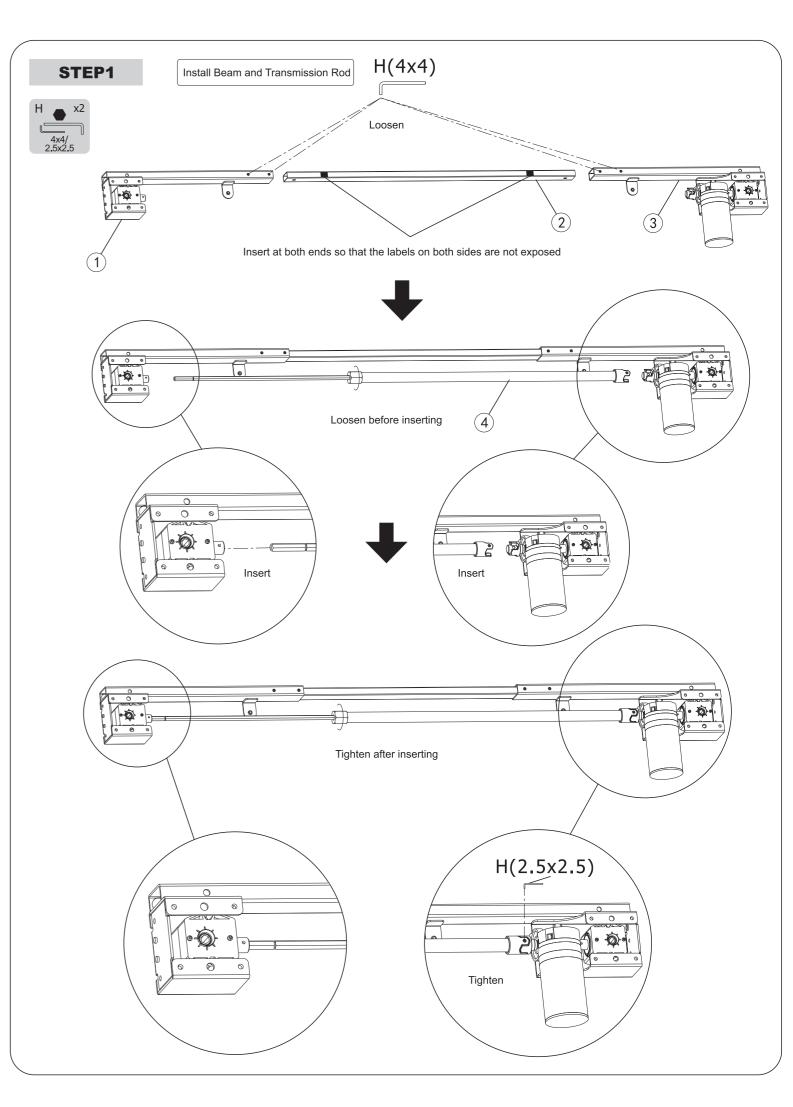


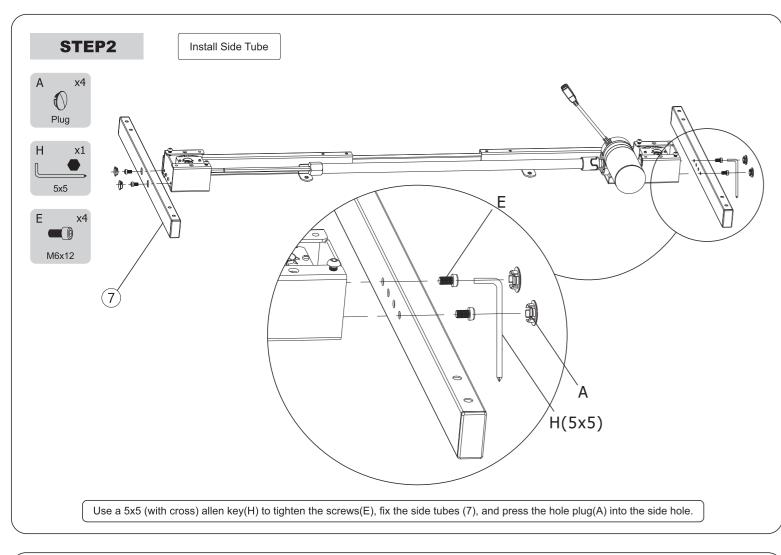


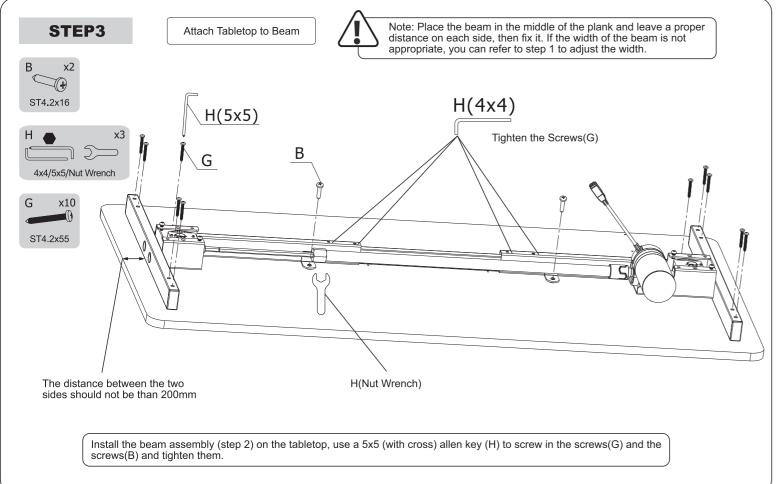

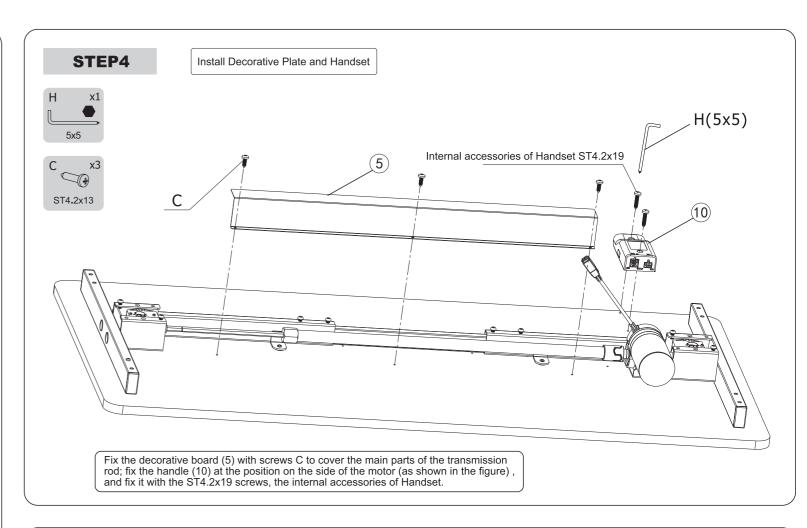

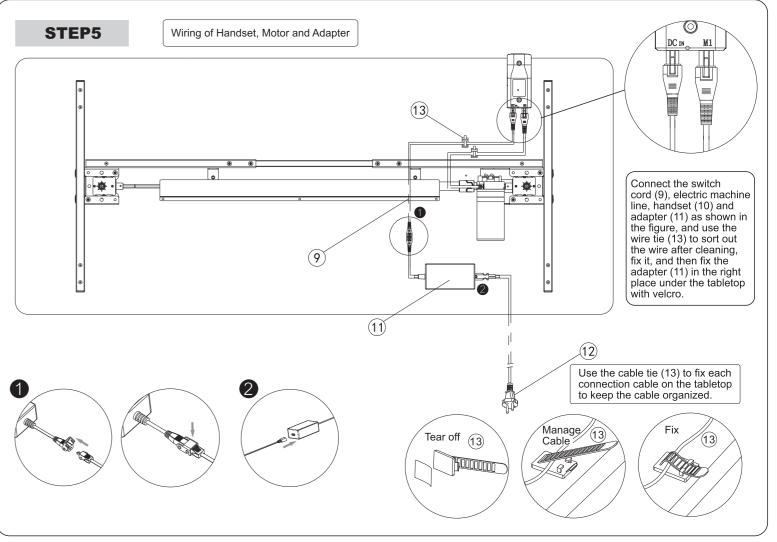

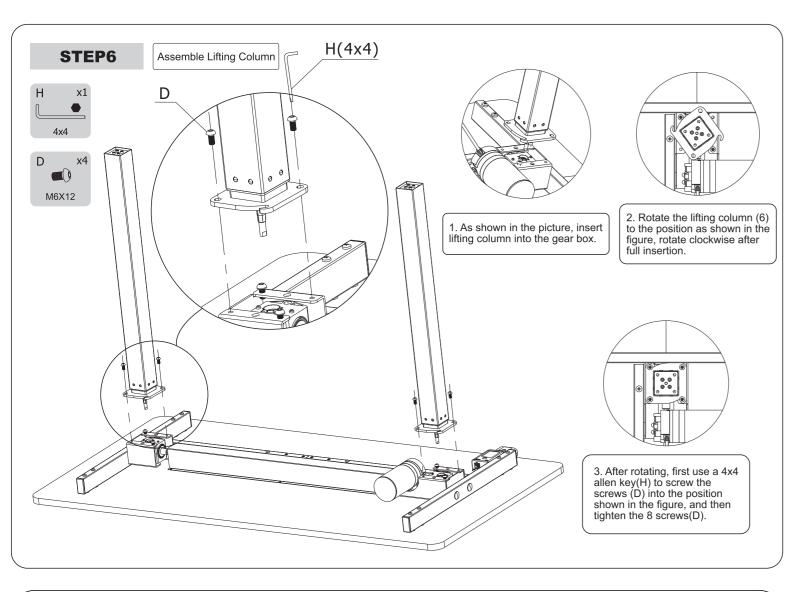

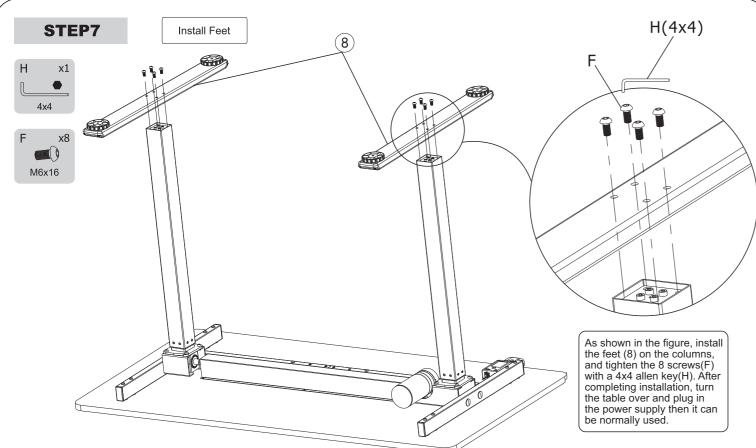

How to use handset

•	"▲"	Adjust the desk upwards	
•	"▼"	Adjust the desk downwards	

Operation

Button Lift Function

Press the "▲" or "▼" button to adjust the height of the desk.

Reset Function

(1) When at the lowest position, long press the "▼" button for more than 5 seconds to enter the reset mode. The reset will be finished until the lift system rebound and stop after reaching the bottom.


- (2) When the lifting system fails, release the button, long press the "▼" button, the reset will be finished until the lift system rebound and stop after reaching the bottom.
- Anti-collision Function
- (1) Built-in sensor, when encountering any objects, the device instantly stops and reverses to avoid damage.
- (2) Simultaneously press and hold "▲" and "▼" for more than 5s to turn on or off the anti-collision function.

Troubleshooting

The following tips will help you detect and eliminate common errors. If the error you met is not listed below, please contact your supplier. The manufacturer and professionals will be capable to investigate and correct the error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with	1.Check if all the cables be connected well
a power supply	2.Contact your supplier or dealer
The dealten sould not be lifted	1.Check if overloaded, max loading: 154lbs
The desktop could not be lifted	2.Contact your supplier or dealer
Overwork (Duty cycle:Max 2min on/30min OFF)	1.Restart it after suspend for 30mins for the working time is too long
(Buty Gyolc.Max 211111 GH/3011111 GTT)	2.Contact your supplier or dealer
Go down but not go up	1.Reset
Go down but not go up	2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 154lbs
Downward Silding	2. Contact your supplier or dealer

Button

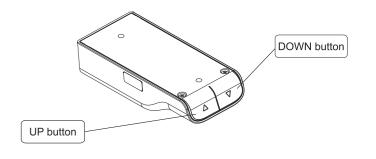



- 1. Power supply: AC100V-240V,50/60Hz
- 2. Service Environment: 0-40 °C

transportation.

- 3. Unplug the power plug before cleaning, wipe the dust on surface using slightly wet cloth. Please be careful not to let water drops get into the internal parts, do not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires, etc. Please follow local environmental legislation for disposition.
- 5. Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings of the product before first use.
 Children are not allowed to play on the product. Any dangerous consequences caused by this improper action will not be the fault of manufacturers.
- 8. Slight noise may caused by the V-ribbed belt or brake system, it will not affect regular use
- Please do not use corrosive or abrasive materials to clean the product. Please ensure the cleanser used will not pollute the environment.
- 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11.Cleaning and user maintenance shall not be made by children without supervision.
 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service
- agent or a similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazardous sources in your operating environment,
- e.g. do not litter the tools around. Always be careful with the packaging materials in order to avoid potential danger. E.g. plastic bags may lead to choking hazard to children. 14. Keep the original package of the product if necessary, in case of future use in

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.